

Welcome to your new kSafe!  
kSafe has helped countless others improve their lives. Now it's your turn!

## STOP & READ BEFORE USING

**Failure to read the user guide has led to some customers accidentally locking items inside for longer than wanted and having to break the base!**

### BEFORE PLACING ANYTHING INSIDE THE KSAFE:


- 1) Read the entire user manual
- 2) Watch the overview video at TheKitchenSafe.com / Click "FAQ" for the overview video
- 3) Test it **WITHOUT** any item inside

Using the lid alone (not attached to the base), insert the batteries (Step 2), test setting it for 1 minute (Step 3), and then again adding 2 minutes using the add time feature (Step 3). Practice locking it a few times before placing any item inside, to avoid accidentally locking an item inside longer than you want.

**Any issues? Before using or returning – email us right away at [info@TheKitchenSafe.com](mailto:info@TheKitchenSafe.com). We want you to be happy with your kSafe and will work to make it right.**

## Step 2: Power me up!

(How to install the batteries)

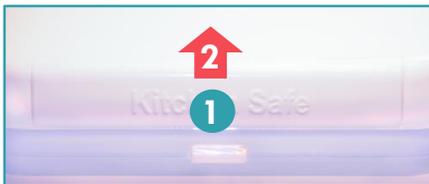

Find the Kitchen Safe logo on the lid.  
Press firmly on the center of "Kitchen Safe",  
then slide it upward.



Insert the first AA battery with the positive terminal towards my display and push the battery to the right. Insert the second AA battery.



Push the second battery into position and close the door. Presto!  
You're good to go! You can replace the batteries at any time, even when the lid is locked to the base!



Having difficulty? Try arranging the batteries like a pyramid before pressing them into my compartment. You can also watch this video example or email us for the video showing how.  
[www.TheKitchenSafe.com](http://www.TheKitchenSafe.com) Select "FAQ".

## Step 3: Using the kSafe

### Lock me!

I'm super easy to use:

1. Place an item in my container
2. Rotate my dial to set the timer
3. Press my dial and I'll lock!

I'll give you **five** seconds to cancel locking. All you have to do is press the dial while I'm counting down!

### Add time!

Want to add more time?

1. Press my dial to pause the timer
2. Rotate my dial to increase timer
3. Press my dial to set new timer!

Just like when locking, I'll give you **five** seconds to cancel.

### Clean me!

Hand wash only please!

My container can be cleaned with soap and warm water.

My lid should be cleaned with a damp cloth or paper towel. My brain is in the lid, and it will stop working if it gets wet!

**To avoid damaging your kSafe:** Always check that the pins are fully in before attempting to remove the lid. Do not lift the kSafe by the lid when attached to the base. Instead carry it by holding the bottom of the base. Dropping the kSafe may damage it. Place, do not drop items in the kSafe. The kSafe is a tool for adult use only; keep out of reach of children.

## Common Questions

**kSafe arrived damaged or not working?**

**Email us as we can solve most issues.**

It happens. Shippers sometimes damage packages. We resolve most issues the same day.

**It's not working!**

**Before breaking in, email us**

Email us at [info@TheKitchenSafe.com](mailto:info@TheKitchenSafe.com) to troubleshoot the issue.

**I locked something in and I need it now!**

**There is no built-in override.** You will need to wait until the timer expires. If you can't wait, email us on how to break the base without damaging the lid. Replacement bases cost less and can be purchased on our website.

**Can I use it anywhere?**

Use in the refrigerator or freezer and can damage the electronics. Instead, use a keyed lock and place the key in the kSafe! You can also use a Keyed lock for larger items such as laptops.

**How to turn it off?**

There is no need to turn it off. The display uses minimal energy.

**What happens if batteries die?**

If you remove the batteries or they die, the timer will stop counting down until you put the batteries back in. We can show you how to replace the batteries with the lid locked to the base. Do not use rechargeable batteries. Duracell, Energizer, Panasonic and Ray-O-Vac brands preferred.

**I broke the base!**

Breaking the base is not covered under warranty. Don't worry, no need to buy a full new unit. We sell replacement bases on our website for a fraction of the cost of a new one.

## Additional Information

By using the kSafe, you (the User) agree to abide by these Terms and Conditions of Use (the "T&Cs").

**WARNING:** In the event the kSafe fails, Kitchen Safe Inc is not liable for replacement or damage caused by the kSafe. Do not place animals, important medications, or any other item in the kSafe that would create significant hardship, expense, or risk to health in the event that the kSafe fails.

The user agrees to provide the T&Cs to other potential users, who must also agree to follow the T&Cs when using the kSafe. The T&Cs may be updated at any time without notice. The current terms and conditions and full warranty are available at our website or email us.

[Info@TheKitchenSafe.com](mailto:Info@TheKitchenSafe.com) / [www.TheKitchenSafe.com](http://www.TheKitchenSafe.com).